

SCORPIUS WIRELESS WAM INSTRUCTIONS

WAM=Wireless Analogue Module

Function= Run analogue car on analogue track using Scorpius Wireless Digital controller

Wiring

White: Power supply positive

Red: Power Supply negative (common negative with track negative)

Black : Track positive

Update controller firmware to version 9.5 before proceeding.

See link here: <http://www.scorpiuswireless.com/downloads.php5>

To set ID 1-24 firstly set controller ID:

First set controller ID

Press menu button for 2 seconds

Use menu button to scroll to Set Car ID

Press LC button

Use menu knob to scroll to correct ID

Press LC button

Press Menu button

To transfer controller ID to WAM:

Connect WAM to driver station. WAM is now "on"

Press Menu button on controller

Use menu knob to scroll to "Set WAM ID and PIN"

Press LC button

"Power off WAM & Power on WAM PIN" , ie, turn WAM off for 5 seconds then back on. This puts the WAM into boot mode.

Press LC button on controller. ID is now matched.


Press menu button to close menu.

Page 2

To reflash WAM with any firmware updates:


Note: You will need to use the Scorpius dongle and install dongle driver program.

Download latest firmware to PC
Unzip files and save to desktop
Open the file and select WAM.exe
This will appear on the PC:

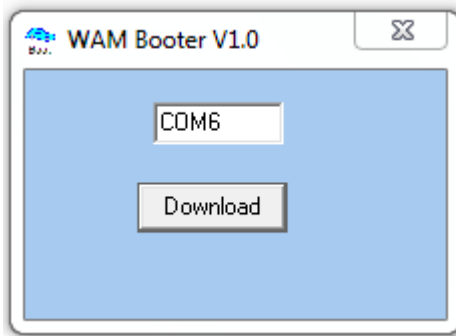

Click "Download"

This will appear on the PC:

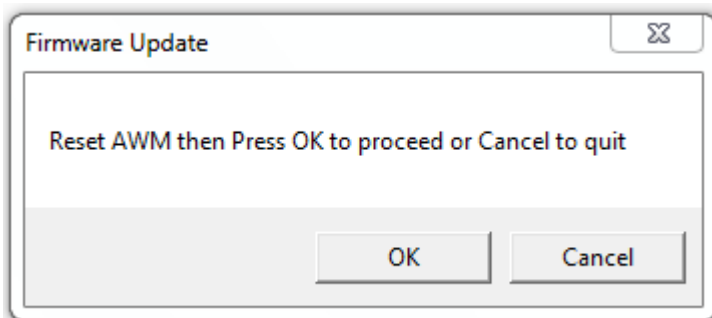

Press red button on WAM then click OK
The progress bar will load up.
Close programs.
Turn WAM off for 5 seconds
Turn WAM on.
WAM now has latest firmware.